

# Drawer Replacement

## Removing Drawer

- Pull drawer fully out.
- Push drawer slight forward (about 1/2 inch), until gap in drawer bracket aligns with the bearing.(See Fig 1)

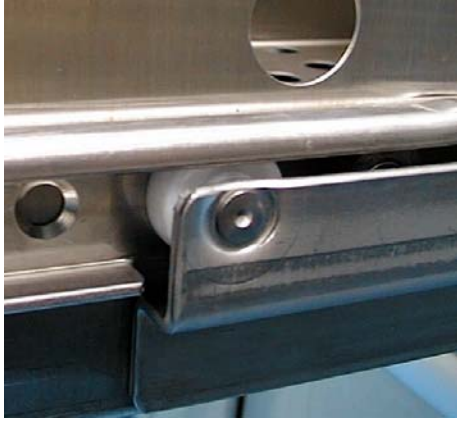


Fig 1

- Once bearing is aligned with the gap, pull drawer up to release it from the drawer runners.
- Pull drawer out until completely out of unit.

## Removing Drawer Runner

- Push runner all the way to back of unit.
- Keeping firm grip of runner, rotate it inwards (away from bracket).

## Replacing Drawer Runner

- Place runner horizontal (with bearing and clip facing up) and place the runner bearing on the lip of the bracket at the back along side to the bracket bearing. (See Fig 2)

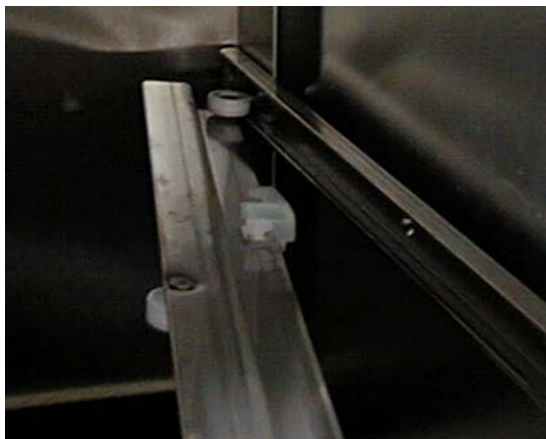


Fig 2



Fig 3

- Place bearing in groove, then rotate the runner until almost vertical.(See Fig 3)
- Then put bottom edge of clip on lip of bracket and continue rotating until complete vertical.

## **Replacing Drawer**

- Pull out runners completely.
- Place rear of drawer bracket on front runner bearing. (See Fig 4)

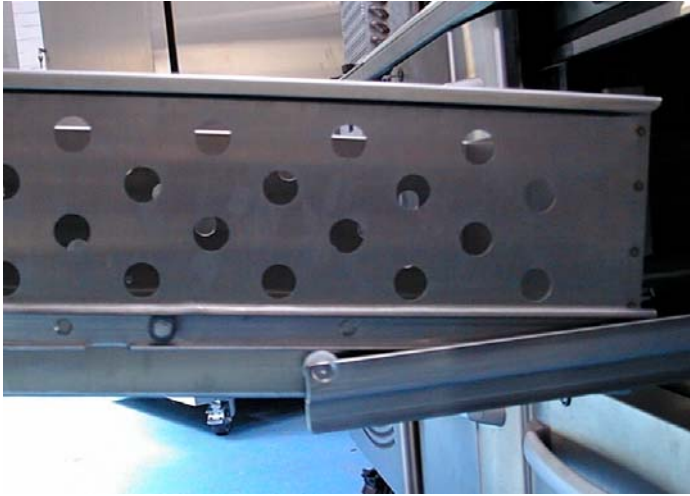


Fig 4

- Slowly push drawer backwards. (Drawer should drop into position on the drawer runners.)